

LED SHOEBOX LIGHT




















Product Features




- 1. High efficiency LED Driver, the wide range input voltage AC100-277V(1-10Vdc Dimmer) or AC277-480V.
- 2. Seoul LED high luminous efficiency and long life.
- 3. Cast aluminium design, better cooling and easy replacement, light quality, LEDTj<185°F.
- 4. Excellent optical design, greatly improve the light utilization and evenness.
- 5. Photocell Control Available (Option).


Product Dimension



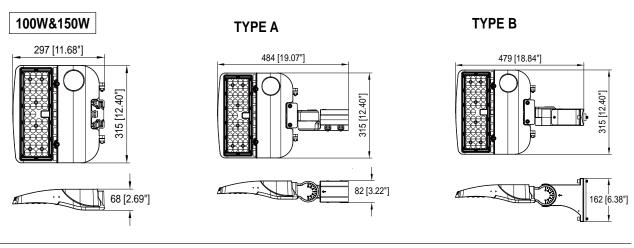


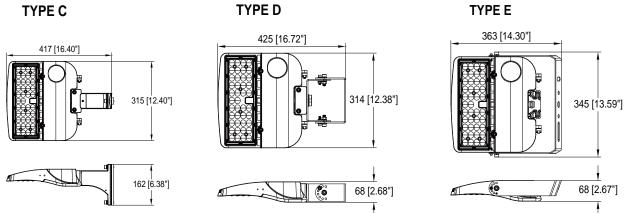


TYPE F

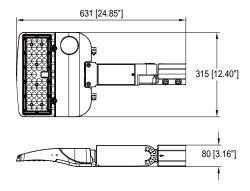




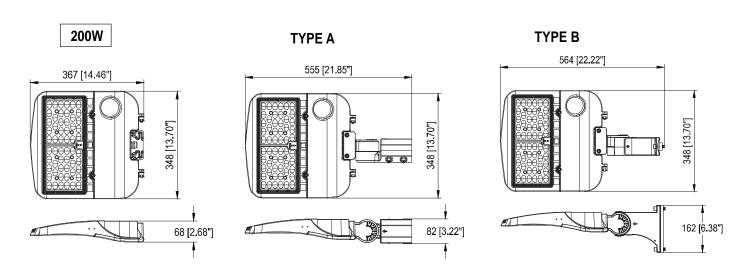


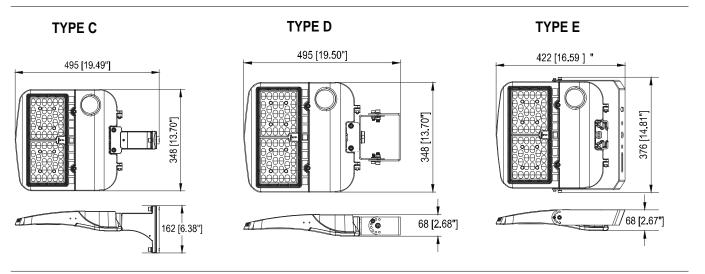




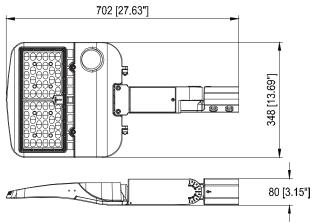




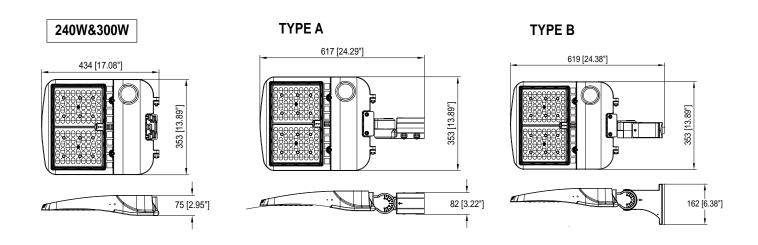

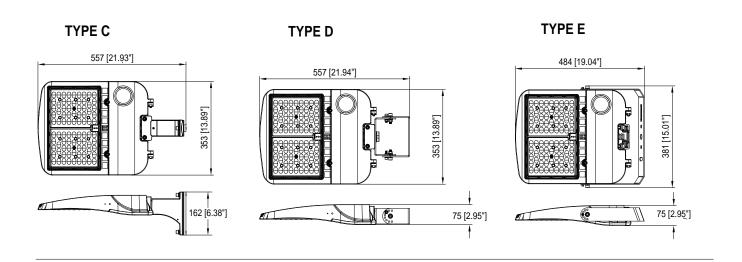

TYPE F

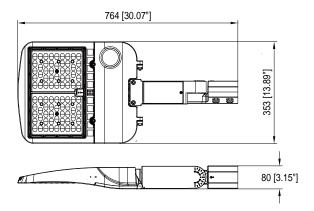



Lighting Parameters




Part No.	Input Voltage	Frequency	Power	Rated Current
TS-XX0410-100W-X-XXK(XXX)		50/60Hz	100W	1.1A
TS-XX0415-150W-X-XXK(XXX)			150W	1.65A
TS-XX0420-200W-X-XXK(XXX)	AC100-277V		200W	2.2A
TS-XX0424-240W-X-XXK(XXX)			240W	2.64A
TS-XX0430-300W-X-XXK(XXX)			300W	3.3A
TS-XX0410-100W-X-HV-XXK(XXX)		50/60Hz	100W	0.4A
TS-XX0415-150W-X-HV-XXK(XXX)			150W	0.6A
TS-XX0420-200W-X-HV-XXK(XXX)	AC277-480V		200W	0.8A
TS-XX0424-240W-X-HV-XXK(XXX)			240W	0.95A
TS-XX0430-300W-X-HV-XXK(XXX)			300W	1.2A

♦ where XX can be "SL" or "FL"; X can be "H", "L" or "HY" (Y=number); XXK can be any number for color temperature: 40K,50K,57K,65K; (XXX) can be blank = no sensor function, "PIR" = PIR sensor, "PTC" = Photocontrol; "MS" = Microwave sensor, "PIP" = PIR sensor and Photocontrol or "MSP" = Microwave sensor and Photocontrol.

Lamp Bead Model	SEOUL 3030				
Driver	SOSEN				
Certificates	UL,CUL				
Lighting Angle	·	PE IV-S / TYPE V			
Lighting Efficiency		Lm/W			
Color Rendering Index	Ra>70				
Working Temperature	-40°F ~+122°F / -40°C ~ +40°C				
Storage Temperature	-40 °F ~+158 °F	/ -40°C ~ +70°C			
Environment Location	WET LOCATIONS				
Life span	>50000H				
Lamp shell	BROWN/BLACK				
Accessories options	Photocell;Shorting cap;Surge protector				
Accessories options	PIR senser; Motion sensor				
Accessories mounting brackets	TYPE A (Slip-fitter)	TYPE B (Square/Round pole mount with slip-fitter function)			
	TYPE C (Square/Round pole mount)	TYPE D (Trunnion)			
	TYPE E (Yoke)	TYPE F			



Expansion function

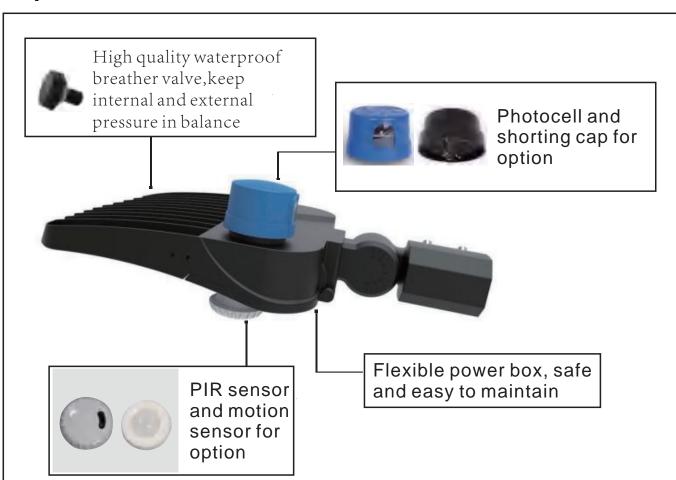


Installation Instruction

TYPE A(Slip-fitter)

Step 1: Loosen the 4 screws on the lamp holder, connect the wires correctly and put the wires into the lamp pole, then lock the screws well to fix the lamp on the lamp pole.

Step 2: Loosen the locking bolt with tools, rotate the lamp and lock the screw after determining required angle.


Notice: Locking bolt can be only compatible with a lamp pole that the outer diameter is ¢60, lamp adjustable angle is 0-90°

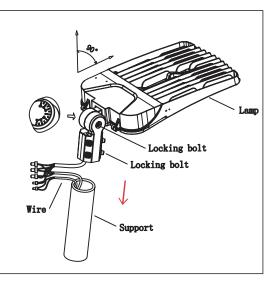




Installation Instruction

TYPE B(Square/Round pole mount with slip-fitter function)

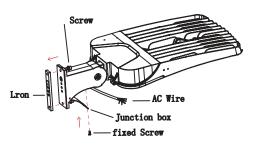


Step 1. Use tools to take screw apart and put installed iron bar away, remove fixed screw and open junction box, then pass the AC wire through it.

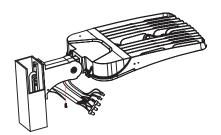


Step 2.Use tools to fix the lamp on square lamp pole, connect the wires correctly and make waterproof measures well, close the junction box and finish installation.

Step 3. Notice: Remove the rubber mat when the lamp is installed on round lamp pole


Notice: Lamp adjustable angle is 0-30°

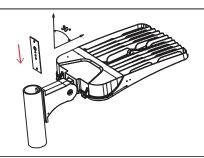

TYPE C(Square/Round pole mount)

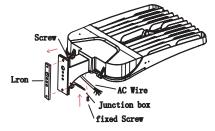


Step 1.Use tools to take screw apart and put installed iron bar away, remove fixed screw and open junction box, then pass the AC wire through it.

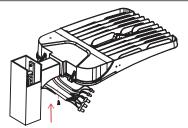

Step 2.Use tools to fix the lamp on square lamp pole, connect the wires correctly and make waterproof measures well, close the junction box and finish installation.

Notice: Remove the rubber mat when the lamp is installed on round lamp pole.

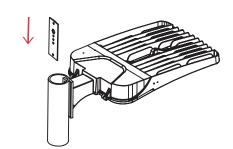





Installation Instruction



TYPE D(Trunnion)

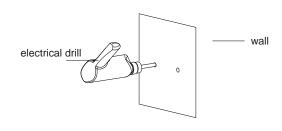


Step 1. Mark the position of the fixing holes with foold lightbracket, then drill the fixing holes.

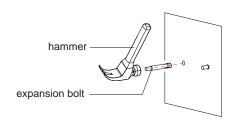


Step 2. Input two expansion bolts.

Step 3: Waterproof measures must be taken after connecting the wire correctly, install the lamp well after putting the wires back into the trunking.

 
Attention: Lamp adjustable angle is 0-90°




TYPE E(Yoke)

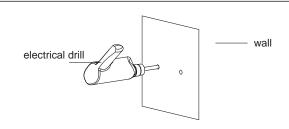

 Step 1.Mark the position of the fixing holes with foold lightbracket, then drill the fixing holes.



 Step 2.Input two expansion bolts.




Step 3:Waterproof measures must be taken after connecting the wire correctly, install the lamp well after putting the wires back into the trunking.


Attention: Lamp adjustable angle is 0-90°




TYPEF

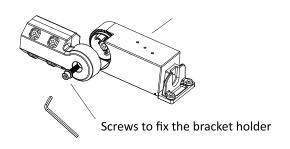


1.Use a wrench to loosen the fixing screws on the bracket, remove the bracket, and then use a screwdriver to remove the bracket wiring cover screws

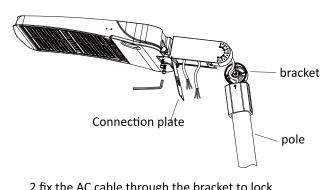

2.fix the AC cable through the bracket to lock it on the lamp body;
Fix the bracket on the pole after passing the AC wire through the bracket

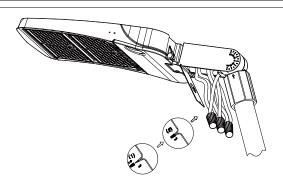

3.Assembling the lamp body of the holder with the bracket, and lock the bracket fixing screws Connect the wires according to the schematic diagram and also make waterproof treatment

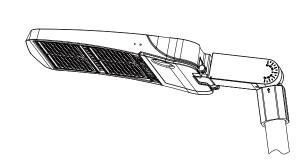


4. Finally, lock the bracket wiring cover plate to complete the installation

Product Application





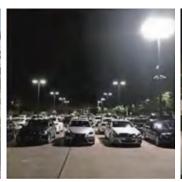





Packing / weight



Bracket	Outer box	Qty/Ctn	100W		150W		
	(L*W*H)	(pcs)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)	Remarks
TYPE A	20.3"*13.78"*4.88" (515*350*124mm)	1	11.2/5.1	13.2/6.0	11.9/5.4	13.9/6.3	
TYPE B		1	12.3/5.6	14.3/6.5	13.0/5.9	15.0/6.8	
TYPE C		1	10.8/4.9	12.8/5.8	11.5/5.2	13.4/6.1	1.0M cable
TYPE D		1	11.2/5.1	13.2/6.0	11.9/5.4	15.0/6.3	
TYPE E		1	10.4/4.7	12.3/5.6	11.0/5.0	13.0/5.9	

	Outer box (L*W*H)	Qty/Ctn	20		
Bracket		(pcs)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)	Remarks
TYPE A	24.6"*15.75"*5.31" (630*403*145mm)	1	12.1/5.5	14.1/6.4	
TYPE B		1	13.2/6.0	15.2/6.9	
TYPE C		1	11.7/5.3	13.6/6.2	1.0M cable
TYPE D		1	12.1/5.5	41.1/6.4	
TYPE E		1	11.2/5.1	13.2/6.0	

	Outer box	Qty/Ctn	Oty/Ctn 240W		300W		
(L*W*H)	(pcs)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)	Remarks	
TYPE A	27.1"*15.9"*5.3" (680*408*150mm)	1	15.4/7.0	17.6/8.0	16.5/7.5	18.7/8.5	
TYPE B		1	16.5/7.5	18.7/8.5	17.6/8.0	19.8/9	
TYPE C		1	15.0/6.8	17.2/7.8	16.1/7.3	18.3/8.3	1.0M cable
TYPE D		1	15.4/7.0	17.6/8.0	16.5/7.5	18.7/8.5	
TYPE E		1	14.6/6.6	16.8/7.6	15.7/7.1	17.9/8.1	

Safety Information

- 1. Using the standard working voltage: AC100~277V/277-480V, 50/60Hz, do not exceed.
- 2. Be sure the power supply is turned off before installation.
- 3. Switch off power of the mains supply or the connection lead respectively before doing any works.
- 4. Please note waterproof, dustproof, electricity prevention and shockproof for the external power wires.
- 5. Directly fix bolts on the installation stem through the hole on the mounting bracket.
- 6. Be sure the connection between the wires is in good condition when install the lamps, beware of leakage.
- 7. Please read the specification carefully before installation.
- 8. The complete installation must be handled by an electrical expert.